

USER MANUAL

5KW/6.2KW

Important Instructions

The instructions contain all the safety alerts, installation instructions, and operation instructions of the 5kW/6.2kW Inverter. Please read the instructions carefully before installation and use, and properly keep it for future reference.

- There is an unsafe voltage in the device. Do not disassemble the device by yourself in case of electric shock. Please contact the local qualified service center for repair.
- The mains input and AC output are of high voltage. Please do not touch the wire connection.
- In order to reduce the risk of electric shock, please disconnect all wires before maintenance.
- Do not open the terminal cover when the device is under operation to prevent the electric shock.
- The device shall be installed by qualified professionals.
- Do not place or install the inverter in a place accessible to children.
- Do not install the inverter in a humid, greasy, flammable, explosive, dusty, or other harsh environment.
- Do not touch the hot shell when the device is under operation.
- It is recommended to install a proper fuse or circuit breaker outside the inverter.
- Disconnect the fuse or circuit breaker near the Photovoltaic (PV) array, mains, and battery terminals with insulating gloves, before installation and adjustment of the wiring of the inverter.
- After installation, please check whether all wires are tightly connected in case of fire hazards due to heat accumulation generated by loose connections.
- The inverter is an off-grid device. Please ensure that the inverter is the only power source of the load. Do not use it in parallel with other AC power sources in case of damage to the inverter and electrical appliance.
- In order to reduce the risk of injury, only deep-cycle rechargeable batteries can be used if using lead-acid battery.
- During normal use, please clean the dust filter of the machine every two months. The operation needs to be carried out after power off.
- The device is for indoor use only and must not be installed outdoors.

Table of Contents

Important Instructions	1
1. Basic Information	3
1.1 Product Overview and Features	3
1.2 Introduction to the Basic System	3
1.3 Product Appearance	4
1.4 Dimensional Drawing	5
2. Installation Instructions	6
2.1 Installation Precautions	6
2.2 Wiring Specifications and Circuit Breaker Selection	7
2.3 Installation and Wiring	8
2.4 Parallel Connection and Wiring	14
3. Working Modes	26
3.1 Power Supply Modes	26
3.2 Charging Modes	28
3.3 Battery Charging Parameters	29
4. Operating Instructions for LCD Screen	32
4.1 Operation and Display Panel	32
4.2 Parameter Settings	36
5. Other Functions	43
5.1 RS485 Communication Function	43
5.2 USB Port Function	43
5.3 Dry Contact Function	44
5.4 Wi-Fi Wireless Communication Function	45
6. APP Instructions	45
7. Protection	46
7.1 Error Code	46
7.2 Troubleshooting (partial)	47
8. System Maintenance	49
9. Technical Parameters	49

1. Basic Information

1.1 Product Overview and Features

This device is a new solar energy storage inverter integrating solar energy storage, grid charging & storage, and AC sine wave output. Controlled by the digital signal processor (DSP), the inverter has high response speed, high reliability, high standards, and other features. Its charging and AC output modes are optional to meet the characteristics of different application scenarios.


Features:

- Simplified charging modes: solar energy charging only/solar energy charging priority charging. Each mode maximizes the use of solar energy.
- An uninterruptible power supply (UPS) function with three types of AC outputs such as grid bypass, inverter output, and power supply.
- Up to 140A maximum current for long-time discharging.
- Long-term 6.2kW discharging at full power output without derating.
- Supports both lead-acid batteries and lithium batteries.
- Up to 40A PV input current.
- Independent input port for the diesel generator.
- USB disk upgrade and online upgrade.
- Dual outputs for smart load management.


1.2 Introduction to the Basic System

The basic application of the inverter is shown in the following figure. The complete operating system includes:

- Generator or grid
- PV module
- Battery
- Domestic load
- Energy storage inverter

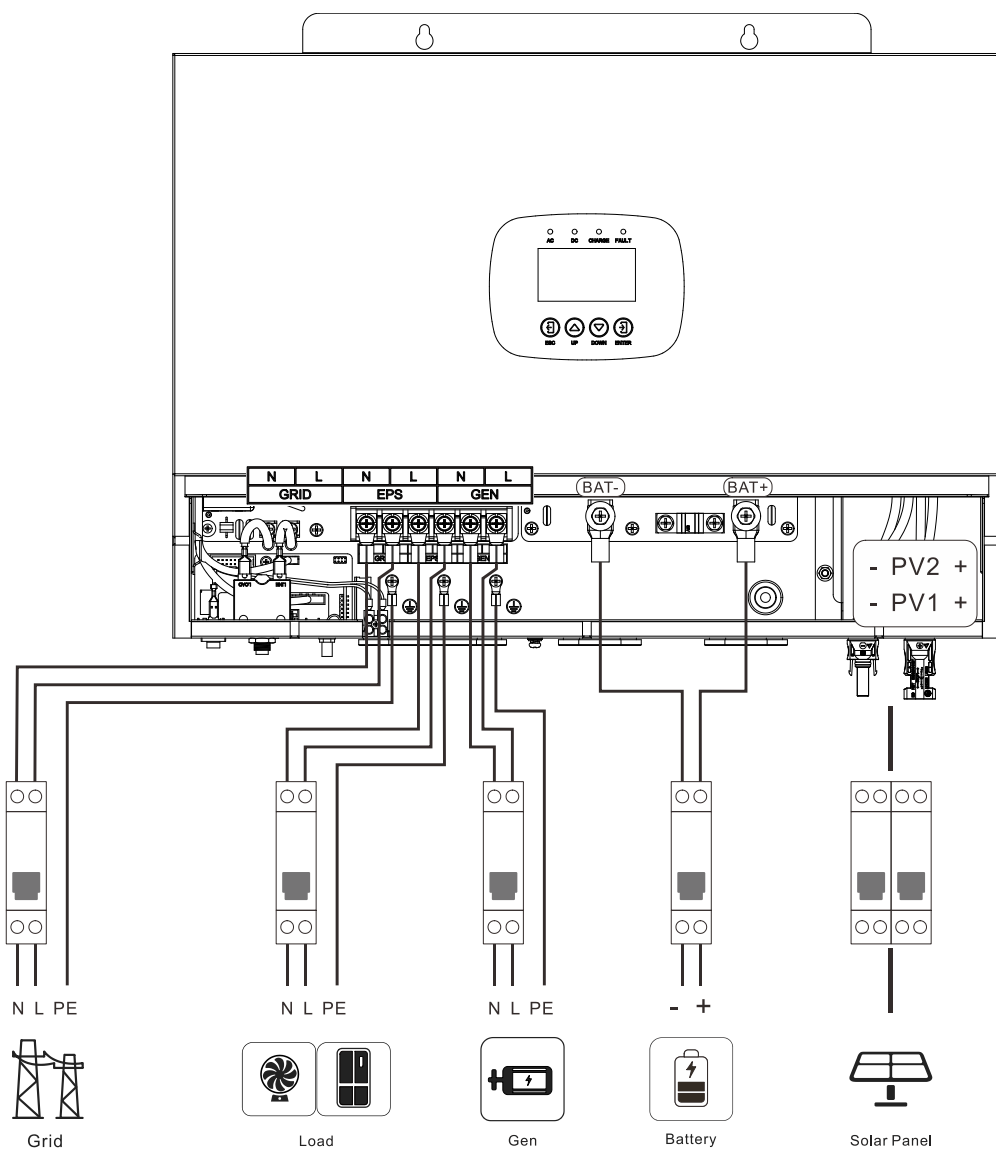


1.3 Product Appearance

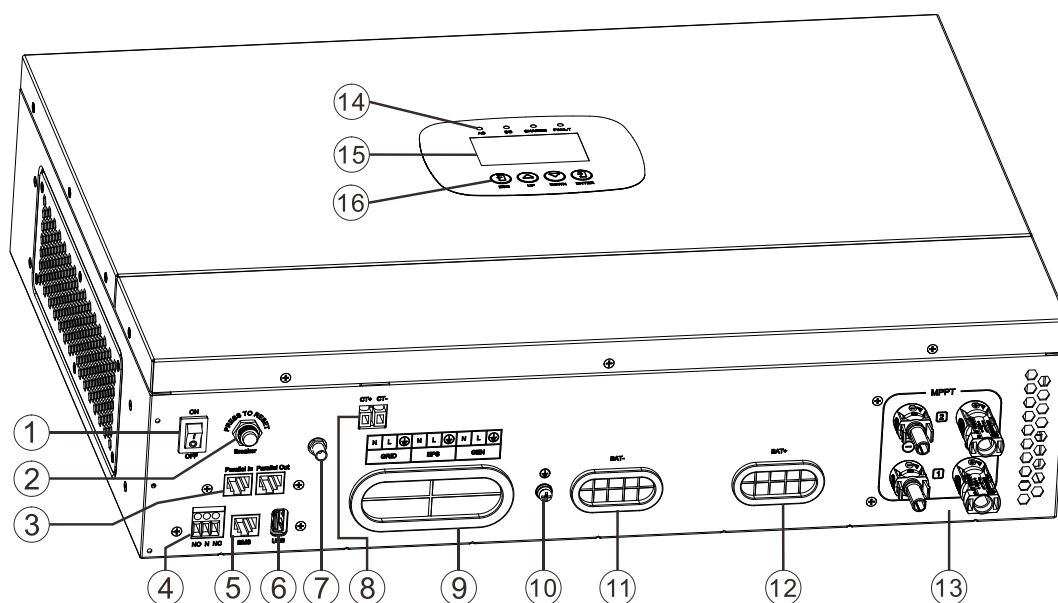

①	ON/OFF rocker switch	⑨	AC output port
②	Overload protector for AC input	⑩	Input port for diesel generator
③	Parallel communication port	⑪	Ground screw hole
④	Dry contact port	⑫	BAT-
⑤	BMS communication port	⑬	BAT+
⑥	USB communication port	⑭	PV input port
⑦	External antenna port	⑮	Status light
⑧	CT contact port(Ratio 2000:1)	⑯	LCD display screen
⑨	AC input port	⑰	Function keys

1.4 Dimensional Drawing

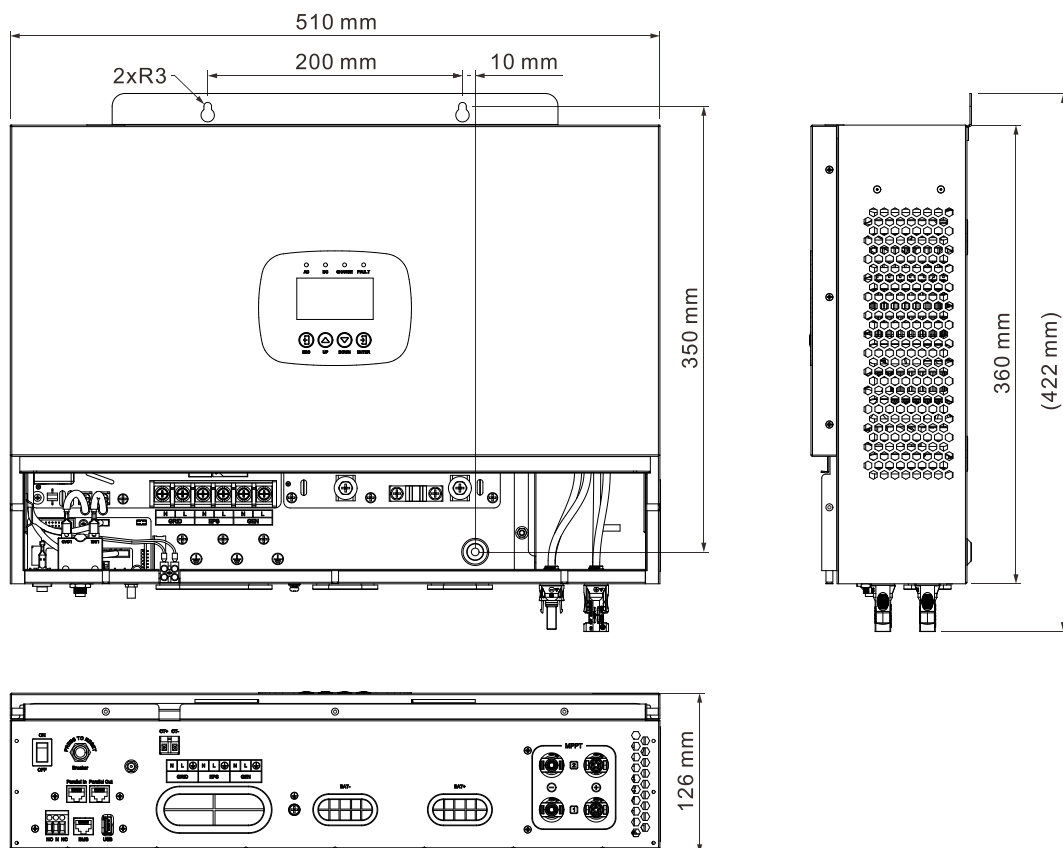









2. Installation Instructions

2.1 Installation Precautions

Before installation, please carefully read this manual to understand the procedures and get familiarized with the precautions.

- Be careful when installing the battery. Please wear protective goggles when installing the lead-acid liquid battery, and rinse with clean water promptly in case of any contact with battery acid.
- Keep the battery away from metal objects in case of short circuits.
- Make sure the environment is well-ventilated because acid gas may be generated when the battery is charged.
- Leave enough space around the inverter for heat dissipation. Do not install the inverter and the lead-acid liquid battery in the same cabinet in case that acid gas generated by the battery corrodes the inverter.
- Only charge the battery compatible with the inverter.
- Loose connectors and corroded wires may cause great heat and melt the wire insulation layer, burn the surrounding materials, and even cause a fire, so please make sure that the connectors are tightened and the wires are preferably fixed with cable ties in case of loose connectors caused by the wobbling wires during movement.
- Select connecting wires with a current density less than 5A/mm^2 for the system.
- Avoid direct sunlight and rainwater in outdoor installation.
- After the power switch is turned off, a high voltage is still inside the inverter. Do not open or touch the internal components until the capacitor completely discharges.
- Do not install the inverter in a humid, greasy, flammable, explosive, dusty, or other harsh environment.
- It is forbidden to reversely connect the input ends of the battery. Otherwise, it may lead to the damage of the device or unpredictable risks.
- The grid input and AC output are of high voltage. Please do not touch the wire connection.
- Do not touch the operating fan in case of injury.

    - Make sure that the inverter is the only power source of the load. Do not use it in parallel with other AC power sources in case of damage.
- Please check the machine before installation to make sure there is no damage in the packaging. You should receive the following items in your package

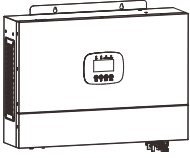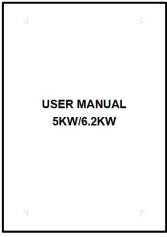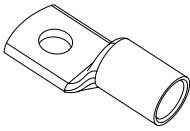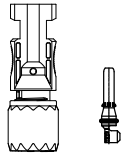	Inverter (*1)		Network cable (*1)
	User manual (*1)		Passport (*1)
	Self-tapping screw ST4.2 (*3)		Terminal SC35-6 (*2)
	OT terminal RNB14-5 (*6)		Terminal RNB5-4 (*4)
	Positive PV Plugs(*2)		Negative PV Plugs(*2)
	PV terminal disassembly tool (*1)		External antenna(*1)

2.2 Wiring Specifications and Circuit Breaker Selection

The wiring and installation must comply with requirements of the national and local electrical codes. The wiring specifications and circuit breakers are recommended as follows:

- Specifications of the AC input and output wire diameter and circuit breaker are as follows:

Device Model	Recommended wire size of AC input/output	Maximum working current	Recommended model of the air switch or circuit breaker
6.2kW	6-10mm ² /8-10AWG	40A	2P-50A

- Specifications of the PV input wire diameter and circuit breaker are as follows:

Device Model	Recommended wire size of PV input	Single-path maximum operating current	Recommended model of the air switch or circuit breaker
6.2kW	6-10mm ² /8-10AWG	40A	2P-50A

- Specifications of the battery input wire diameter and circuit breaker are as follows:

Device Model	Recommended wire size of BAT input	Recommended O-type terminal	Maximum working current	Recommended model of the air switch or circuit breaker
6.2kW	42mm ² *2/1AWG*2	SC35-6	140A	2P-180A

- Specification of the shell earth wire is as follows:

Device Model	Recommended size of the earth wire
6.2kW	4-6mm ² /10-12AWG

Notes:

- The wire diameters are for reference only. If the distance between the PV array and the device or between the device and the battery is long, the thicker wire can reduce the voltage drop to improve the system efficiency.
- The above wire diameters and circuit breakers are theoretically recommended. Please select the appropriate wire diameters and circuit breakers based on actual conditions.

2.3 Installation and Wiring

Warnings:


- There is unsafe voltage in the grid input and PV input. Please disconnect the circuit breaker or air switch before wiring.

- During the wiring process, please make sure the circuit breaker and air switch are disconnected in case of short circuit and the “+” and “-” polarities on each port are correctly connected. The circuit breaker must be installed on the battery port.


Installation and wiring steps are as follows:

Step 1:

Reserve a gap of 500 mm above and below the inverter and a gap of 500 mm on the left and right on an appropriate wall to ensure ventilation and heat dissipation. Unpack and take out the inverter, disassemble the terminal cover by removing the screws, and fix the inverter on the wall with five self-tapping screws. As shown in the figure below, the equipment is fixed using self-tapping screws ST4.2*60 through holes 1, 2, 3, 4 and 5.

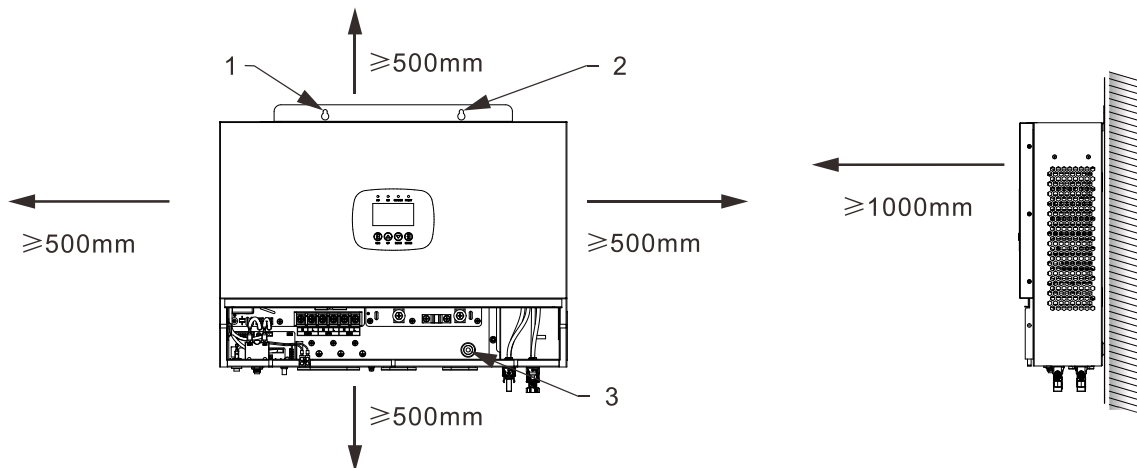

Step 2: Wiring

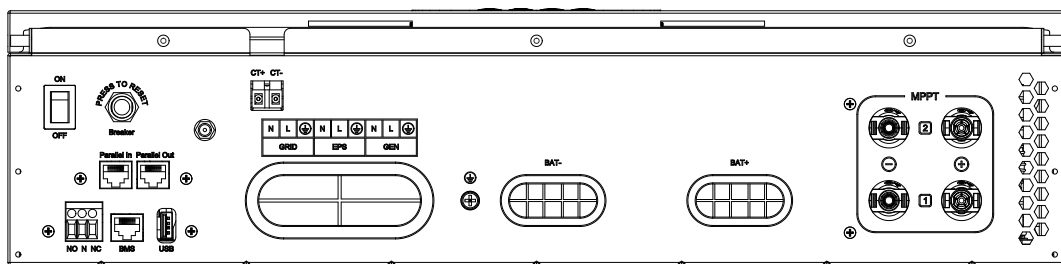

Bottom view


Please follow the steps below to perform the wiring. In order to ensure safe operation and comply with regulations, please install a circuit breaker and disconnect the circuit breaker before wiring.

(1) Connect the battery

Before wiring, disconnect the external circuit breaker and check whether the cables used are thick enough. Please refer to “2.2 Wiring Specifications and Circuit


Breaker Selection.” The BAT cables must be connected to the device with an O-type terminal with a recommended internal diameter of 10mm. The O-type terminal must clamp the BAT cables tightly to prevent excessive heat caused by excessive contact impedance;

Insert BAT+/BAT- cables as indicated on the label, and fix them with the M6 screw. The torque is 20 kgf.cm. As shown in the figure below, “BAT+” represents the battery anode, and “BAT-” the battery cathode.

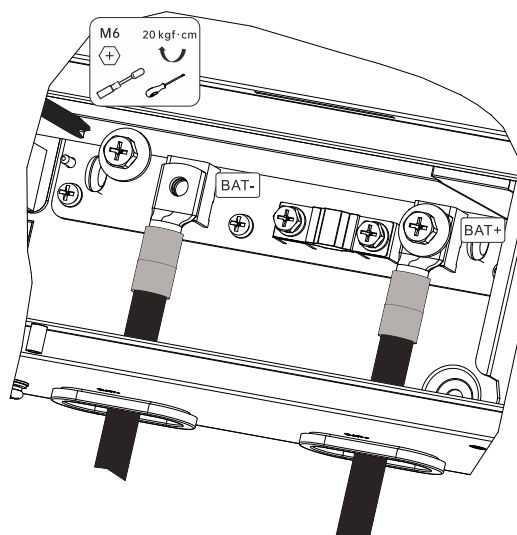

(2) Connect PV cables


Before wiring, please disconnect the external circuit breaker and check whether the cables used are thick enough. Please refer to “2.2 Wiring Specifications and Circuit Breaker Selection.” Please refer to the figures below for detailed installation methods and cable requirements of the PV ports.

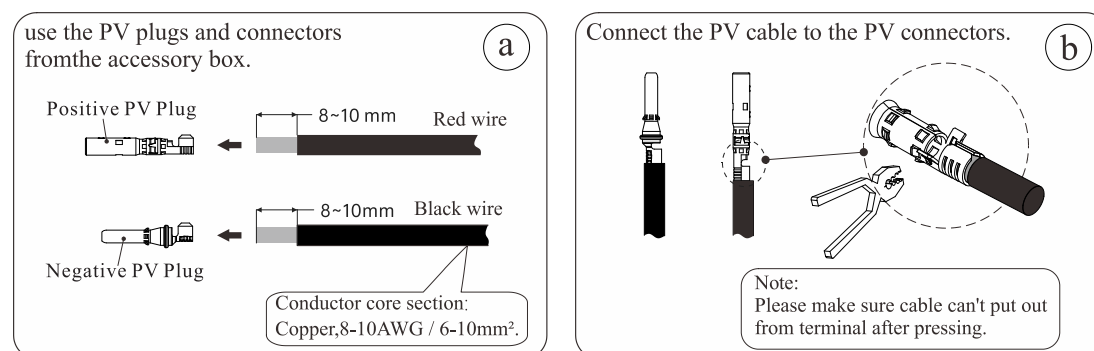

Screw the cap on and plug it into the inverter side.
Make sure the cable polarity is correct.

Note:


1. There will be a clicking sound if the connectors are inserted correctly into the PV ports.
2. Pull the PV cable make sure there is no loosen or shaking.

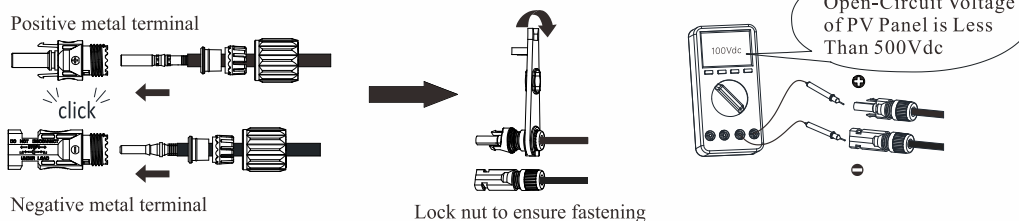

The polarity of the PV strings must not be connected in a reverse manner. Other wise, the inverter could be damaged.

Note:


1. Please make sure the PV input voltage/current not beyond the specification before plug in;
2. When installing the PV terminal, pay attention to the distinction between the positive and negative terminals and the one-to-one correspondence between the terminals and hybrid inverter;
3. When the terminal is docked, there is a click sound. After the terminal is locked, gently pull the PV cable to observe whether looseness.

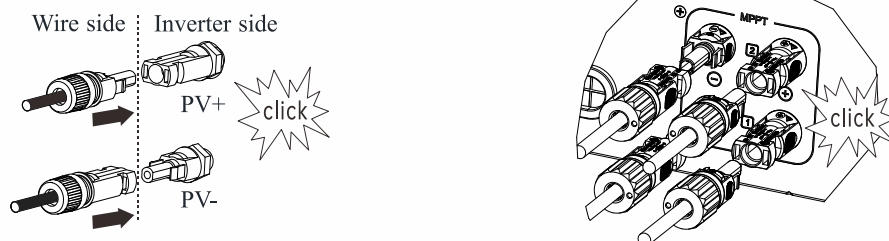

(3) Connect AC input

Before AC input wiring, please disconnect the external circuit breaker and check whether the cables used are thick enough. Please refer to “2.2 Wiring Specifications and Circuit Breaker Selection.”


Insert AC output cables as indicated on the label, and fix the terminals on the device with a slotted screwdriver. The torque is 12 kgf.cm. As shown in the figure below, “L” represents the live wire, “N” the neutral wire, and “PE” the protective earth wire.

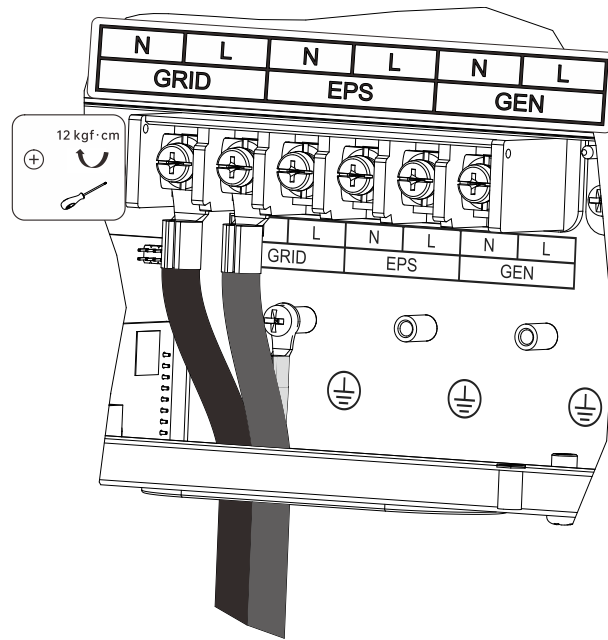

(4) Connect AC output

Before AC output wiring, please disconnect the external circuit breaker and check whether the cables used are thick enough. Please refer to “2.2 Wiring Specifications and Circuit Breaker Selection.”


Insert AC output cables as indicated on the label, and fix the terminals on the device with a slotted screwdriver. The torque is 12 kgf.cm. As shown in the figure below, “L” represents the live wire, “N” the neutral wire, and “PE” the protective earth wire. Please note that the two outputs share the same earth wire port.

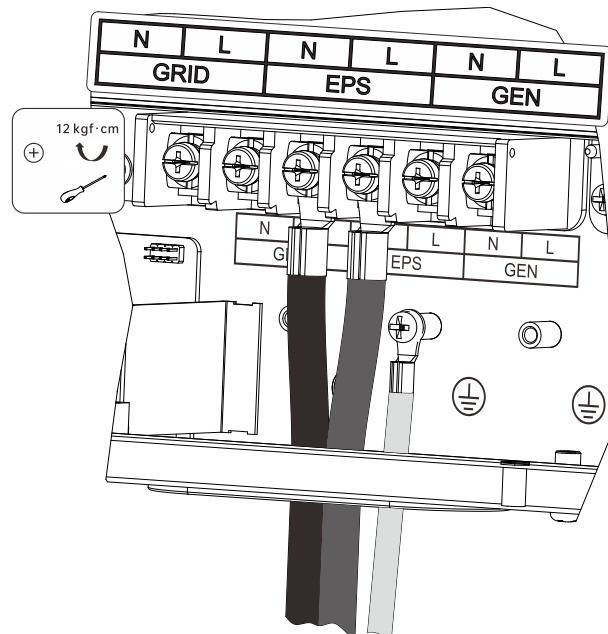

(5) AC input of diesel generator


Before wiring inputs, please disconnect the external circuit breaker and check whether the cables used are thick enough. Please refer to “2.2 Wiring Specifications and Circuit Breaker Selection.”

Insert AC output cables as indicated on the label, and fix the terminals on the device with a slotted screwdriver. The torque is 12 kgf.cm. As shown in the figure below, “L” represents the live wire, “N” the neutral wire, and “PE” the protective earth wire.

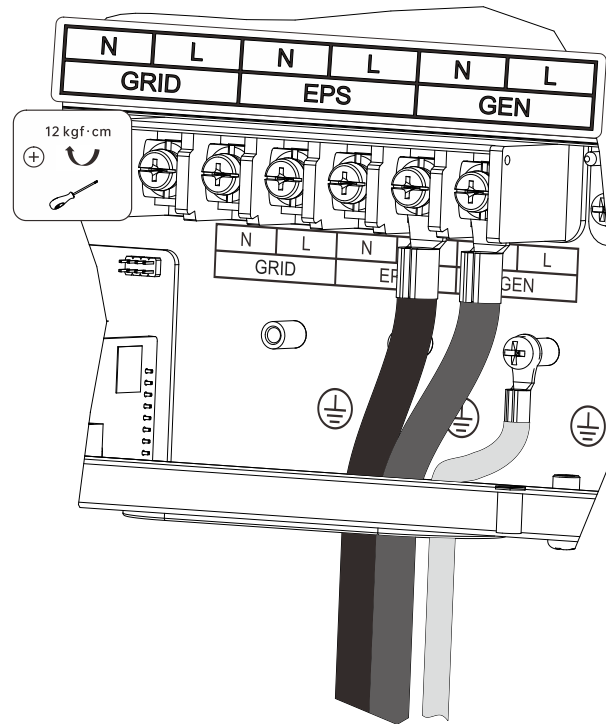


(6) Shell earthing

Please note an additional earthing point on the shell. Clamp the cable with the RNBL5-4 OT terminal and lock it in the position indicated in the figure below. For cable specifications, please refer to the “2.2 Wiring Specifications and Circuit Breaker Selection.” Please ensure that the equipment is properly grounded.

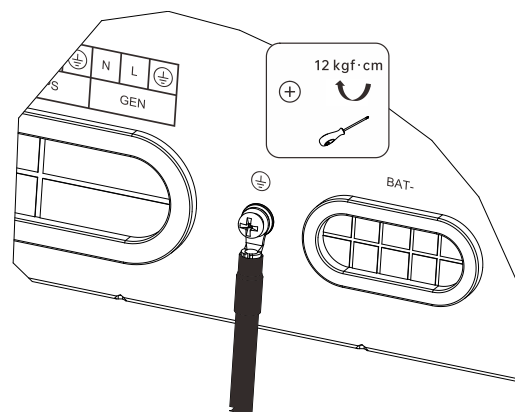

Step 3: Check whether the wiring is correct and firm, especially whether the battery input anode and cathode are correctly connected, whether positive and negative PV inputs are correctly connected, whether the AC input is incorrectly connected to the AC output, and whether the AC input is incorrectly connected to the input port of the diesel generator.

Step 4: Use a Phillips screwdriver to reinstall the terminal cover on the device. The torque is 7 kgf.cm.

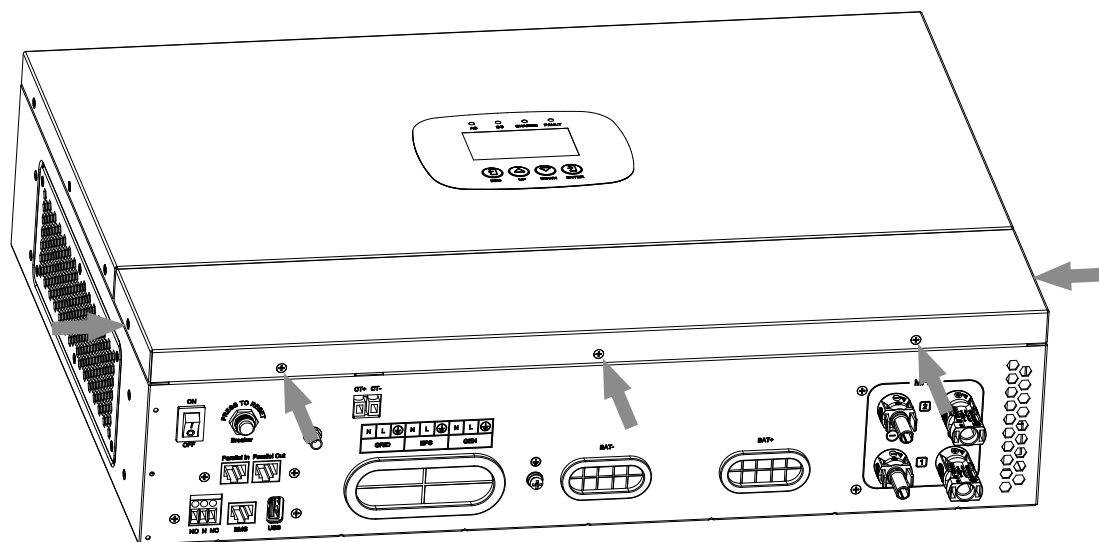

Step 5: Start the inverter

First, close the circuit breaker of the battery, and switch the inverter's rocker switch to the "ON" state. The blinking "AC" indicator indicates the normal operation of the inverter. Then, close the circuit breaker between the PV array and the grid, and turn on the AC load after the AC output is normal. In this case, the inverter will work normally in accordance with the set mode.

Notes: If energy is supplied to different AC loads, it is recommended to turn on the load with a large impulse current first, and then turn on the load with a small impulse current after the load works stably, in order to avoid the protection action caused by a large transient impulse generated by turning on the load at the same time. If the inverter fails to work normally, and the LCD or indicator displays abnormality, please refer to Section 7 for troubleshooting.

2.4 Parallel Connection and Wiring

2.4.1 Introduction to Parallel Connection

1. The inverter supports upto 9 in parallel connection.

2. It is necessary to ensure that the parallel wiring is correct and firm with a gap of 500 mm between devices reserved in the use of the parallel function.

2.4.2 Guidance and Schematic Diagram of Single-phase Parallel Connection

1. AC IN wiring:

L,N and PE wires of all inverters must be connected to the same wires respectively. Make sure the connection is correct and the wire length and diameter are the same before power-on and startup to avoid abnormal output of the parallel system. Multiple different AC power sources are not allowed to ensure the consistency and uniqueness of the AC source.

2. AC OUT wiring


L,N and PE wires of all inverters must be connected to the same wires respectively. Make sure the connection is correct and the wire length and diameter are the same before power-on and startup to avoid abnormal output of the parallel system.

3. BAT wiring

All inverters must be connected to the same battery, BAT+ must be connected to BAT+, and BAT- must be connected to BAT-. Make sure the connection is correct and the wire length and diameter are the same before power-on and startup to avoid abnormal output of the parallel system.

4. Parallel communication wiring

The parallel communication cable is a network cable, and each device is connected with one input cable and one output cable. The left network interface is used for input and the right network interface for output. The parallel communication cable shall be inserted in place to avoid system abnormality caused by poor communication.

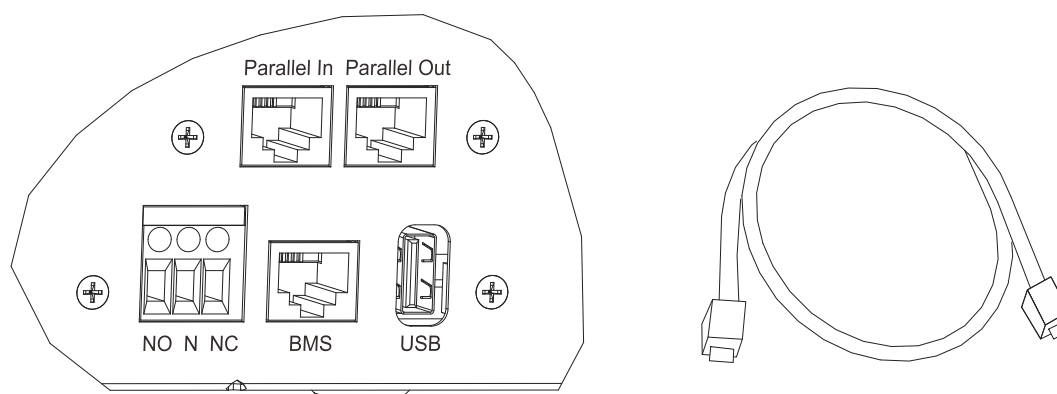


5. Note

Before and after connecting the system, please refer to the system wiring diagram in detail to ensure that all wiring is correct and reliable before power-on. If a new device needs to be connected after the system is properly wired, powered on and operates normally, please disconnect the battery input, PV input, AC input, AC output, and diesel generator input, and re-wire and incorporate into the system after all inverters are power-off detected by a multimeter.


6. Schematic diagram

In case of a single-phase parallel connection of multiple inverters, please conduct wiring according to the schematic diagram below:


(1) Parallel connection of two inverters:

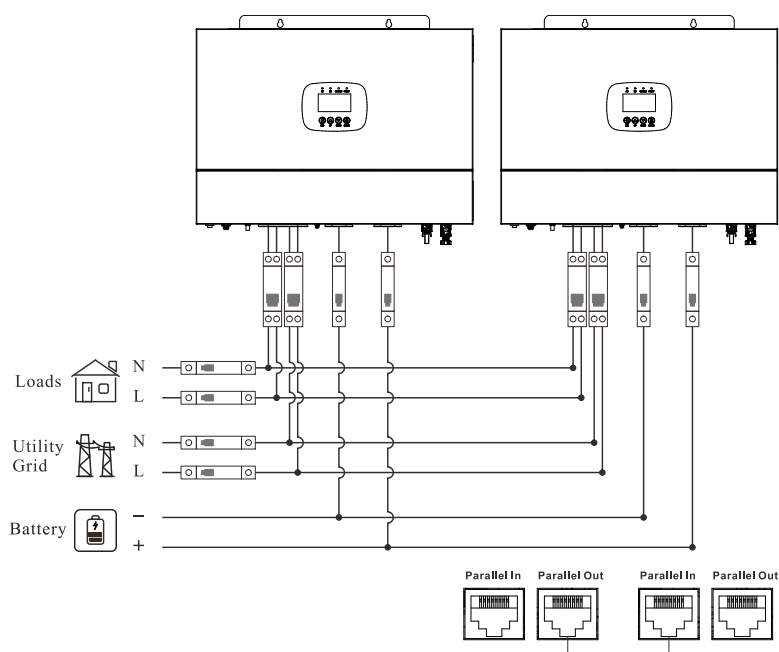


(2) Parallel connection of three inverters:

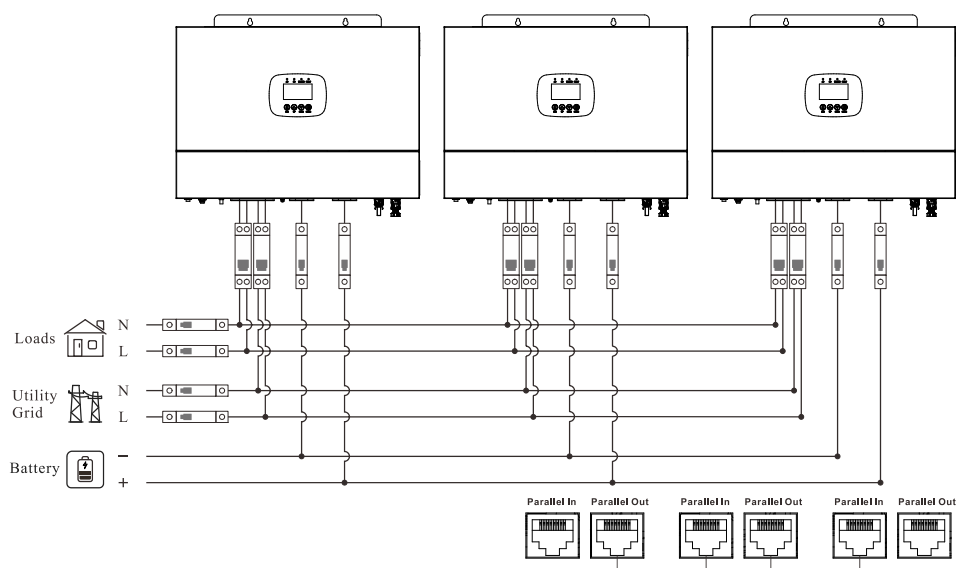

(3) Parallel connection of four inverters:

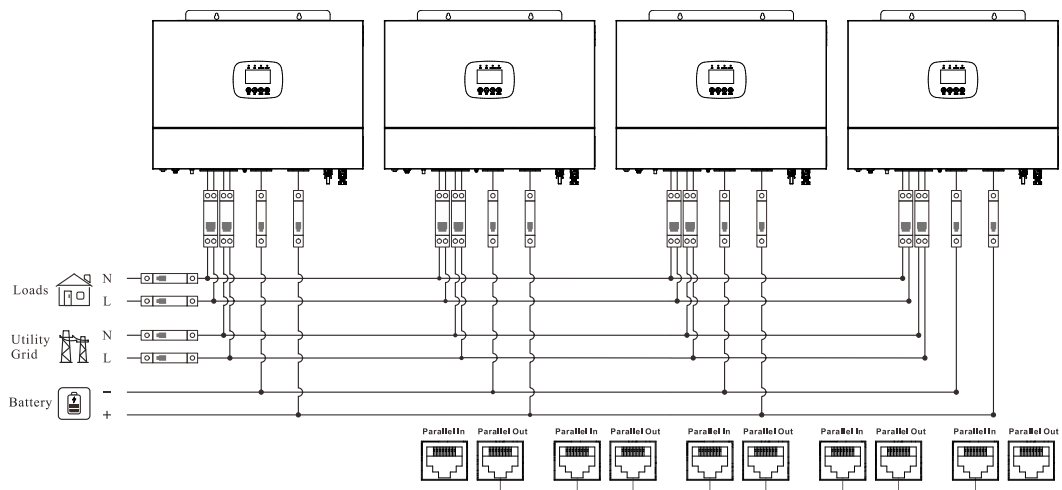

(4) Parallel connection of five inverters:

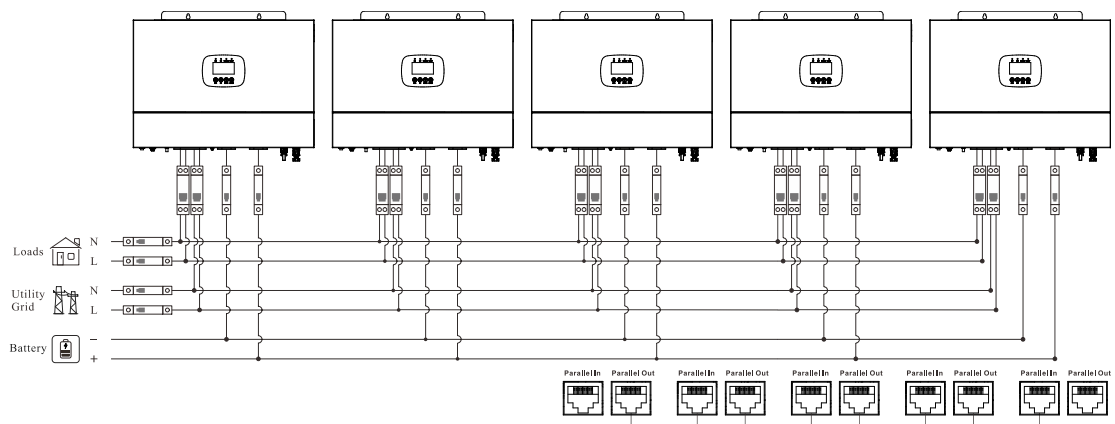


(5) Parallel connection of up to nine inverters, ibid.

2.4.3 Three single-phase parallel parameters setting and display

1. After wiring the three single-phase parallel machines as shown in the above figure, please note that the communication line must be plugged in (otherwise the machine will start working in stand-alone mode). When you power on for the first time, do not turn on the circuit breaker between the grid and the load end, and turn on the battery to power the machine.

2. Next, set the parameters of machine one through the screen. The parameter settings of machine one are as follows:

1) The 46th setting item on the screen is used to set the parallel CAN communication address, which is set to 0;

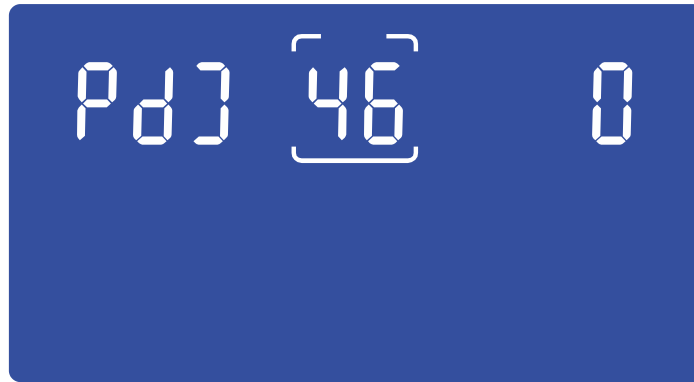

2) The 47th setting item on the screen is used to set the parallel mode, which is set to PAL single-phase parallel mode.




3) The 48st setting item on the screen is used to set the parallel device type, which is set to MAS host mode.



3. Next, set the parameters of machine 2 through the screen. The parameter settings of machine 2 are as follows:

1) The 46th setting item on the screen is used to set the parallel CAN communication address, set to 1;

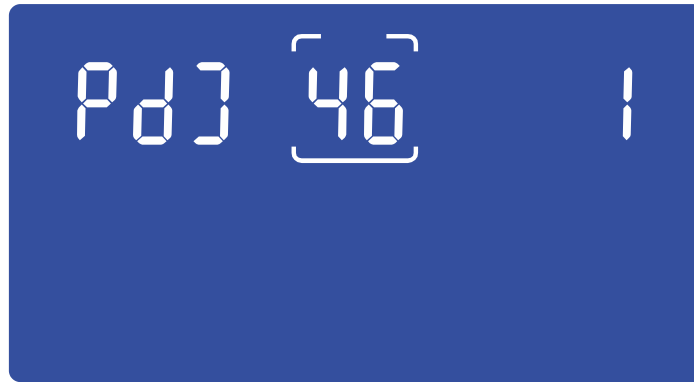

2) The 47th setting item on the screen is used to set the parallel mode, which is set to PAL single-phase parallel mode.




3) The 48st setting item on the screen is used to set the parallel device type, which is set to SAL slave mode.



4. Next, set the parameters of machine 3 through the screen. The parameter settings of machine 3 are as follows

1) The 46th setting item on the screen is used to set the parallel CAN communication address, which is set to 2;

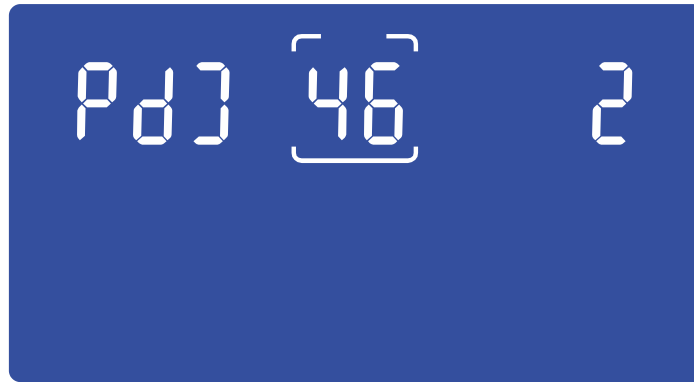

2) The 47th setting item on the screen is used to set the parallel mode, which is set to PAL single-phase parallel mode.



3) The 48st setting item on the screen is used to set the parallel device type, which is set to SAL slave mode.



5. After setting the above parameters, wait for 10 seconds, the parallel fault will disappear, and the system will enter the working state. Observe whether both machines enter the off-grid state. If both enter, it means the setting is OK.

6. Disconnect the battery at this time, wait for the machine to be powered off, then open the circuit breaker between the load end and the grid end, and then connect the battery, after which the system will enter the grid-connected working state.

2.4.4 Guidance and Schematic Diagram of Three-phase Parallel Connection

1. AC IN wiring:

N and PE wires of all inverters must be connected to identical wires. L wires of all devices in the same phase shall be connected together, but the L wires of AC input in different phases cannot be connected together. Other precautions shall be consistent with those of the single-phase parallel connection.

2. AC OUT wiring


N and PE wires of all inverters must be connected to identical wires. L wires of all devices in the same phase shall be connected together, but the L wires of AC output in different phases cannot be connected together. Other precautions shall be consistent with those of the single-phase parallel connection.

3. BAT wiring

All inverters must be connected to the same battery. BAT+ must be connected to BAT+, and BAT- must be connected to BAT-. Make sure the connection is correct and the wire length and diameter are the same before power-on and startup to avoid abnormal output of the parallel system.

4. Parallel communication cable

The parallel communication cable is a network cable, and each device is connected with one input cable and one output cable. The left network interface is used for input and the right network interface for output. The parallel communication cable shall be inserted in place to avoid system abnormality caused by poor communication.

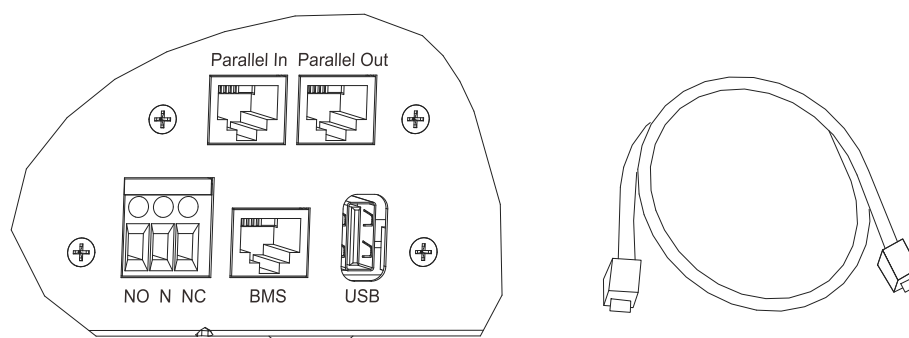

5. Note

Before and after connecting the system, please refer to the system wiring diagram in detail to ensure that all wiring is correct and reliable before power-on. If a new device needs to be connected after the system is properly wired, powered on and operates normally, please disconnect the battery input, PV input, AC input, AC


output, and diesel generator input, and re-wire and incorporate into the system after all inverters are power-off detected by a multimeter.

6. Schematic diagram

In case of a three-phase parallel connection of multiple inverters, please conduct wiring according to the schematic diagram below:


(1) A three-phase system with three inverters

1+1+1 system:

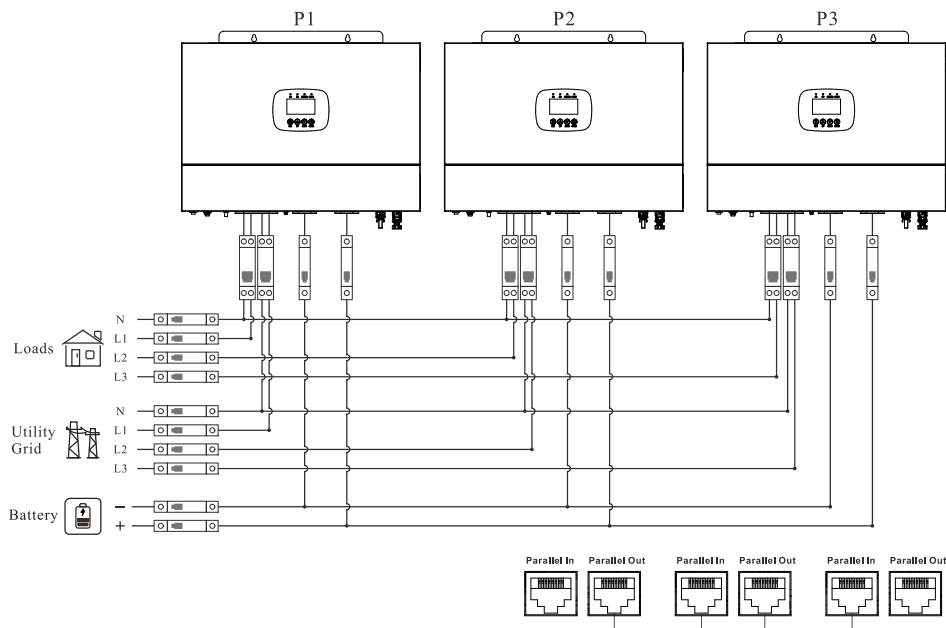

(2) A three-phase system with four inverters

2+1+1 system:

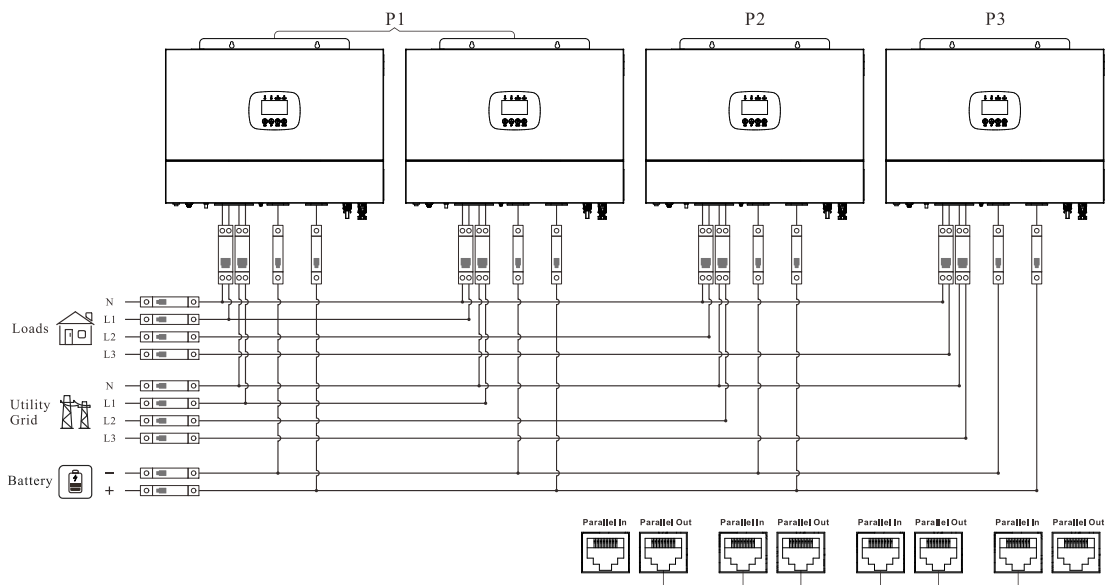

(3) Parallel connection of up to nine inverters, *ibid.*

Notes:

(1) It is necessary to check whether the wiring is correct according to the diagram above to avoid problems in the system before the inverter is powered on with its screen on.

(2) All connections shall be fixed firmly to avoid abnormal system operation caused by disconnected wires.

(3) When the AC output is wired to the load, the wiring shall be correctly connected according to the requirements for electrical equipment to avoid damages.

(4) After the system runs and the measured output voltage is correct, please turn on the load circuit breaker for power supply.

2.4.5 Three-phase system parallel parameter setting and example for three inverters


1. After wiring as shown in the figure above, please note that the communication line must be plugged in (otherwise the machine will start working in stand-alone mode). When you power on for the first time, do not turn on the circuit breaker between the grid and the load end, and turn on the battery to power the machine.2. Next, set the parameters of machine one through the screen. The parameter settings of machine one are as follows:

2. Next, set the parameters of machine one through the screen. The parameter settings of machine one are as follows:


1) The 46th setting item on the screen is used to set the parallel CAN communication address, which is set to 0;



2) The 47th setting item on the screen is used to set the parallel mode, which is set to phase A in the three-phase parallel mode, 3P1.

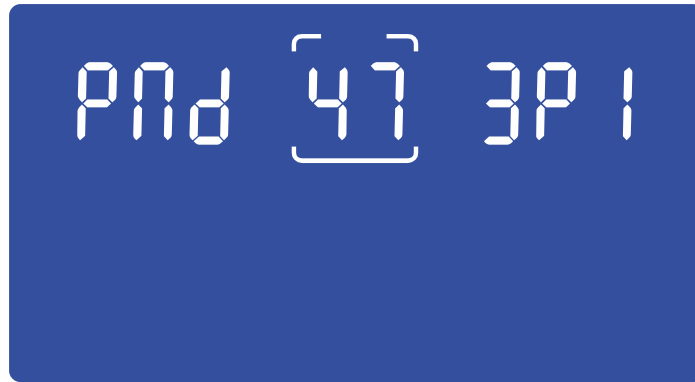

3) The 48st setting item on the screen is used to set the parallel device type, which is set to MAS host mode.

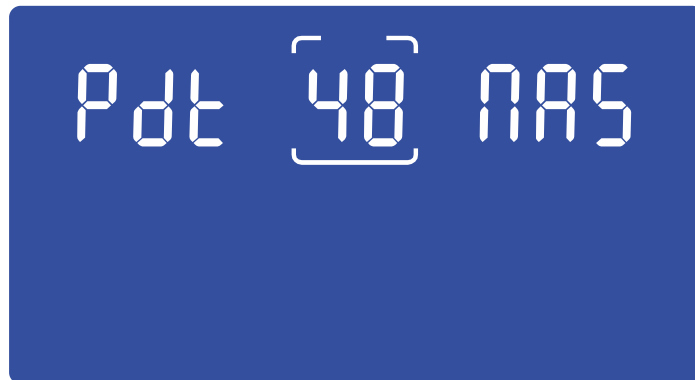

3. Next, set the parameters of machine 2 through the screen. The parameter settings of machine 2 are as follows:


1) The 46th setting item on the screen is used to set the parallel CAN communication address, set to 1;



2) The 47th setting item on the screen is used to set the parallel mode, which is set to phase B in the three-phase parallel mode, 3P2.




3) The 48st setting item on the screen is used to set the parallel device type, which is set to SAL slave mode.

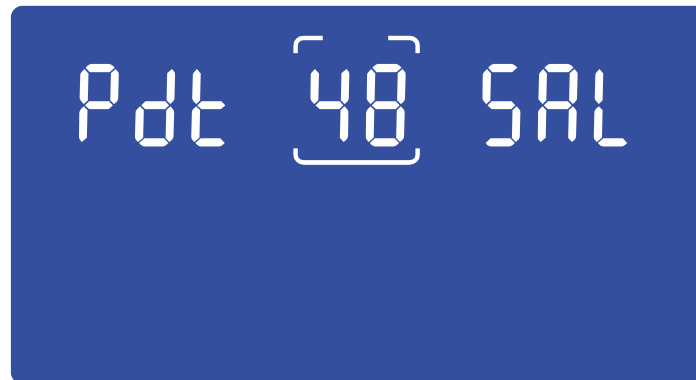

4. Next, set the parameters of machine 3 through the screen. The parameter settings of machine 3 are as follows

1) The 46th setting item on the screen is used to set the parallel CAN communication address, which is set to 2;

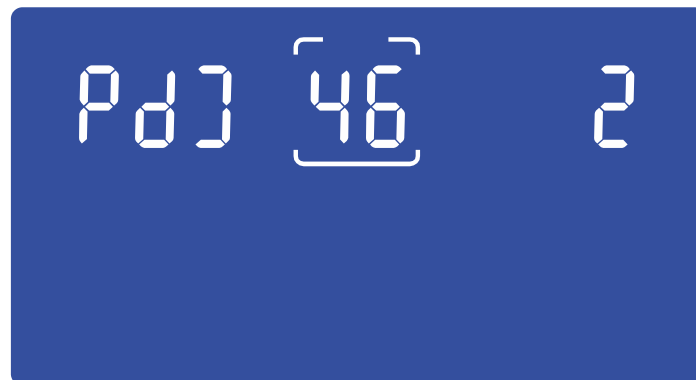

2) The 47th setting item on the screen is used to set the parallel mode, which is set to phase C in the three-phase parallel mode, 3P3.



3) The 48st setting item on the screen is used to set the parallel device type, which is set to SAL slave mode.



5. After setting the above parameters, wait for 10 seconds, the parallel fault will disappear, and the system will enter the working state. Observe whether both machines enter the off-grid state. If both enter, it means the setting is OK.

6. At this time, disconnect the battery, wait for the machine to be powered off, then open the circuit breaker at the load end and the grid end, and then connect the battery. After that, the system will enter the three-phase parallel working state.


3. Working Modes

3.1 Power Supply Modes

➤ PV power priority mode:

This mode prioritizes PV power for power supply to the load. When the PV power is unavailable, grid and battery will supply power to maximize the use of solar power generation and maintain the battery power. This working mode is suitable for areas with a relatively stable power grid. The priority of power supply realized at the load side is PV power -> Grid -> battery.

With PV energy input:

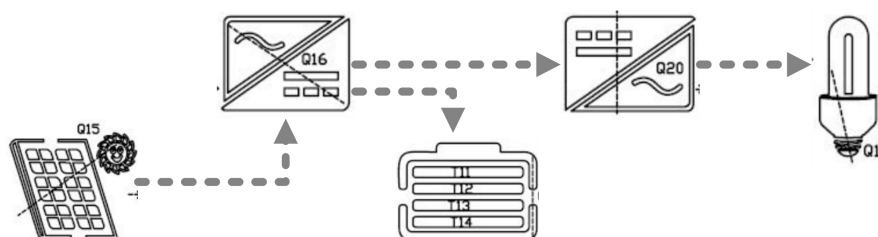

Without PV energy input:




➤ Grid priority mode

This mode prioritizes grid for power supply to the load. Battery inverter power supply will be applied only when the grid is unavailable, and grid charging and power supply will be applied when the grid is available. If there is PV power, PV power will charge the battery first, and the surplus energy and grid will be output to the load in a complementary way, maximizing the use of solar energy, reducing the use of grid, and keeping the battery power. This mode is suitable for areas with an unstable power grid. The priority of power supply realized at the load side is: Grid -> PV power -> battery.

With grid input:



Without grid input:

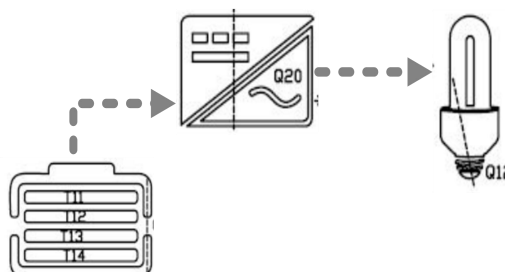

➤ Inverter priority mode:


In this mode, the grid will be applied for power supply only when the battery voltage is lower than the setting point (setting item 04), and the battery discharging

mode will be applied when the battery charging voltage is higher than the setting point (setting item 05), so as to repeat the battery charging and discharging cycle. If there is PV power, PV power will maximize the use of solar energy according to PV energy and battery charging and discharging states. This mode is used in areas with a stable power grid. The priority of power supply at the load side is: PV power -> battery -> grid.

When the battery voltage is lower than the set point (04 setting item), switch to grid supply



The battery voltage is higher than the grid-to-battery voltage, switch to battery inverter

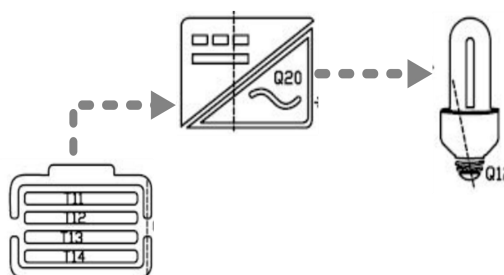


3.2 Charging Modes


➤ PV charging priority:

PV power gives priority to charging the battery, and the grid charging is only started when PV power does not meet the working conditions. This mode can make full use of solar energy to charge in the daytime and switches to grid at nighttime to keep the battery power, which is used in areas with a relatively stable power grid and relatively expensive electricity price.

With PV energy input:

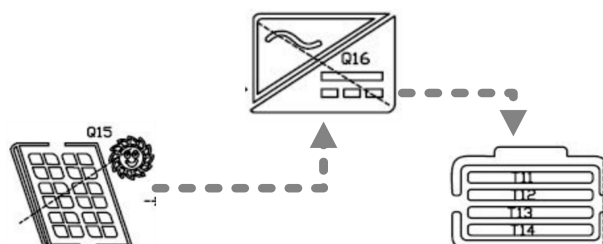


Without PV energy input:

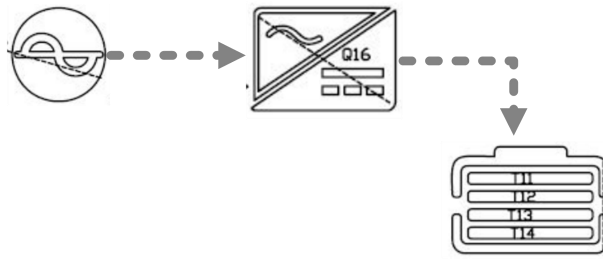


➤ Charging:

As for charging of PV energy and grid, PV energy charging is preferred with grid as a supplement when PV energy is insufficient. This mode mainly meets the requirement for maximum charging power with the fastest charging speed. It is suitable for areas with an unstable power grid, providing sufficient backup power supply.

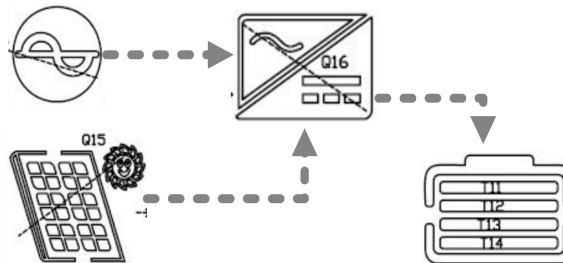


➤ PV charging mode only

Only the PV energy is used to charge the battery without grid. This mode is the most energy-saving one because the battery power comes from PV solar energy, which is usually used in areas with good lighting conditions.

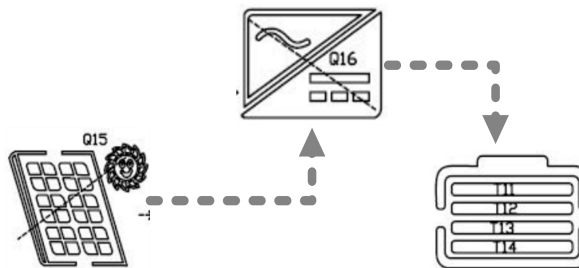

3.3 Battery Charging Parameters

➤ The charging curve of the lead-acid battery is shown in the figure below:

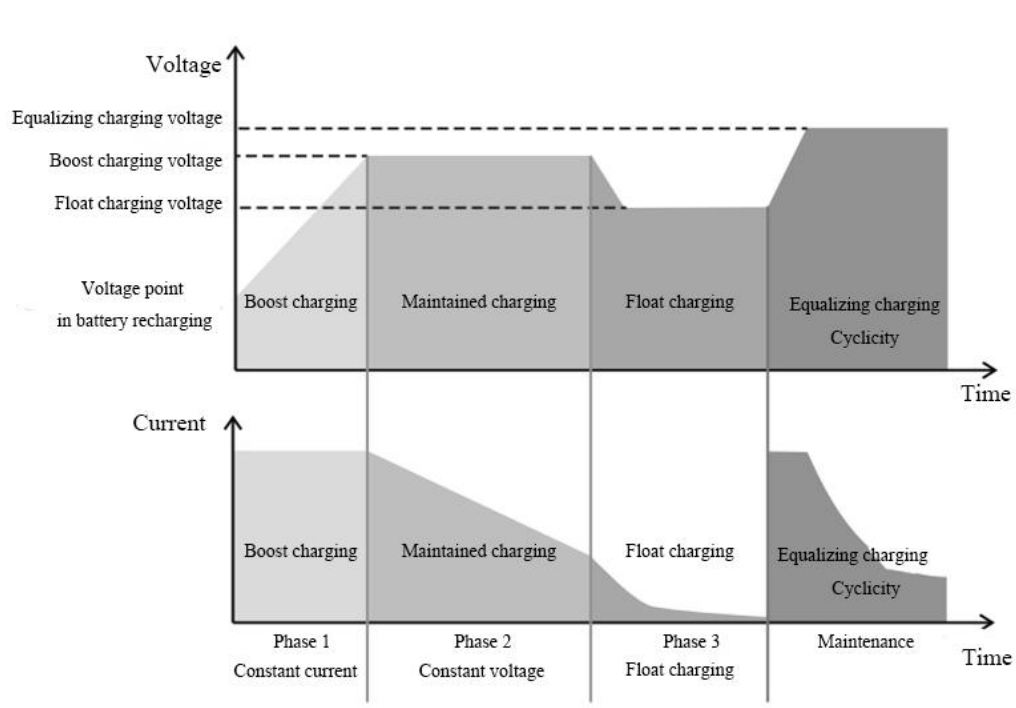


➤ The charging parameters of the lead-acid battery are shown in the table below:

	Gel lead-acid (GEL)	Sealed lead-acid (SLD)	Flooded lead-acid (FLD)	Customized (USER)
Over-voltage disconnect threshold	60V	60V	60V	40~52V (Adjustable)
Recovery voltage in recharging after fully-charged	52V	52V	52V	52V (Adjustable)
Boost charging voltage	56.8V	57.6V	58.4V	40~52V (Adjustable)
Float charging voltage	55.2V	55.2V	55.2V	40~52V (Adjustable)
Equalizing charging voltage	56.8V	58V	59.2V	40~52V (Adjustable)
Under voltage alarm threshold	44V	44V	44V	40~52V (Adjustable)
Under voltage recovery threshold	Under voltage alarm threshold + 8V			
Low-voltage disconnect threshold	42V	42V	42V	40~52V (Adjustable)
Low-voltage recovery	52V	52V	52V	52V (Adjustable)
Discharging limited voltage	40V	40V	40V	40~52V (Adjustable)

Over-discharge (detection) delay time	5s	5s	5s	1~30s (Adjustable)
Equalization duration	-	120 min	120 min	0~600 min (Adjustable)
Equalizing charging interval	-	30 days	30 days	0~250 days (Adjustable)
Boost charging duration	120 min	120 min	120 min	10~600 min (Adjustable) 180min (Default)

➤ The charging curve of the lithium battery is shown in the figure below:

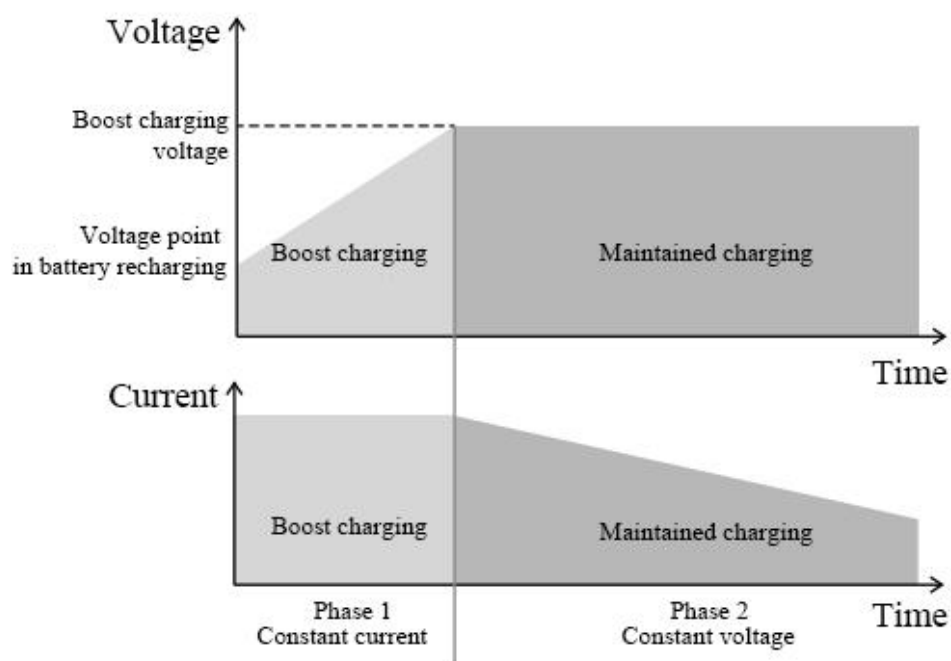

➤ The charging parameters of the lithium battery without BMS communication are shown in the table below:


	LiFePO4 (L14)	LiFePO4 (L15)	LiFePO4 (L16)	Ternary lithium (N13)	Ternary lithium (N14)
Over-voltage disconnect threshold	60V	60V	60V	60V	60V
Recovery voltage in recharging after fully-charged	47.6V	50.4V	53.6V	50.4V	54.8V
Boost charging voltage	49.2V	53.2V	56.8V	53.2V	57.6V
Float charging voltage	49.2V	53.2V	56.8V	53.2V	57.6V
Under voltage alarm threshold	43.2V	46.4V	49.6V	43.6V	46.8V

Under voltage recovery threshold	Under voltage alarm threshold +8V				
Low-voltage disconnect threshold	42V	45.6V	48.8V	38.8V	42V
Low-voltage recovery	46V	49.6V	52.8V	46V	49.6V
Discharging limited voltage	40.8V	43.6V	46.4V	36.4V	39.2V
Over-discharge (detection) delay time	30s	30s	30s	30s	30s
Equalization duration	120 min	120 min	120 min	120 min	120 min

4. Operating Instructions for LCD Screen

4.1 Operation and Display Panel

- The operation and display panel include one display screen, four indicators, and four keys, as shown in the figure below.

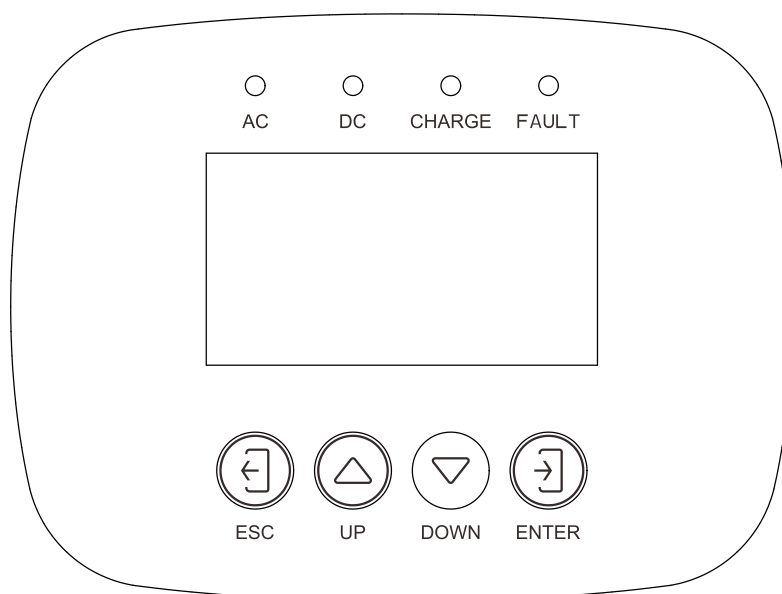

- Description of the horse race lamp


Indicator	Color	Description
AC	The green light is on	Grid charging or grid bypass output
	The green light flashes	Inverter output
DC	The yellow light is on	Battery discharging
CHARGE	The yellow light flashes	Fast charging
	The yellow light is on	Float charging

FAULT	The red light is on	Fault state
	The red light flashes	Firmware upgrade

➤ Description of the keys

Function key	Description
	When out of the setting function, (on the Display menu or the Settings menu), the key is used for turning pages: click UP to turn the page up and click DOWN to turn the page down. When setting the parameters, the key is used to increase or decrease parameters;
	
	On the Display menu, click to back to the first page. On the Settings menu, click to exit.
	Press and hold it for 2s to enter the Settings menu and click to enter or confirm the options.

➤ Introduction to Display Panel



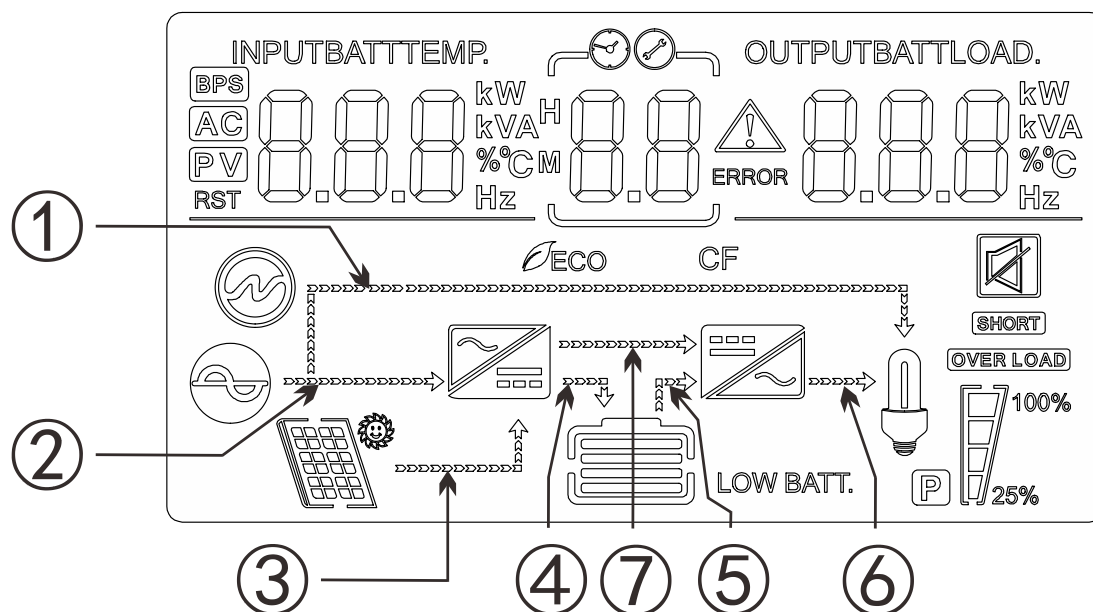




Arrow indication

①	Power grid to load	②	Grid power supply to charging circuit
③	PV power supply to charging circuit	④	The charging circuit charges the battery

⑤	The battery supplies power to the inverter circuit	⑥	The inverter circuit supplies power to the load
⑦	The PV supplies power to the inverter circuit		

 ➤ Introduction to the icons on the display panel

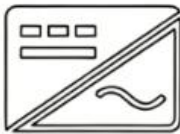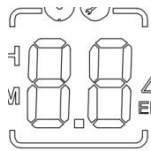Icon	Description	Icon	Description
	The AC input port is connected to an AC input		The inverter circuit is working
	PV connected to solar panels		AC output is in overload condition
	Device connected to battery		AC output load percentage
LOW BATT.	The battery voltage is too low (battery SOC is less than 5%)		Buzzer is not enabled (mute)
	AC/PV charging circuit is working		The device has an alarm event
	AC output terminal has AC voltage output	ERROR	The device is in a fault state
	The device is in setup mode		Energy saving mode icon
	The parameter display on the far right of the screen, 1. In non-setting mode, it displays the current real-time parameter page number; 2. In setting mode, it displays the current setting page number		
Parameters displayed on the left side of the screen: Equipment input parameters			
	AC Input		PV Input

 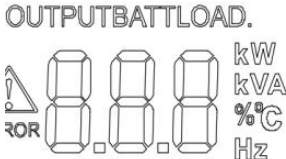	The icon is not displayed		Displays battery voltage, total battery charging current, AC charging power, AC input voltage, AC input frequency, PV input voltage, internal heat sink temperature, software version
Parameters displayed on the right side of the screen: Device output parameters			
	Indicates output voltage, output current, output active power, output apparent power, battery discharge current, software version, alarm code, fault code; in setting mode, displays the setting parameters under the currently set parameter item code;		

➤ Real-time data check

Under normal conditions, there are 16 pages in the display screen. Display information such as input and output voltages, input and output frequencies, battery, PV voltage and current, load, software version, and fault alarms. If any faults information, the red light will stay on constantly and needs to go to page 15 to check faults code.

Click the UP/DOWN key to flip the display interface up/down. Without any key operation, it will automatically return to the first page after 60 seconds; click ESC to jump to the first page of real-time parameters; press and hold ENTER for more than two seconds to enter the Settings interface. Information on the real-time parameter interface is as follows:

Page	Parameter on the left of the screen	Parameter on the right of the screen
1	BATT V	OUTPUT V
2	BATT SOC	AC OUTPUT Hz
3	BATT A	BATT kW
4	PV INPUT V	
5	PV INPUT A	
6	PV INPUT kW	
7	AC INPUT V	AC INPUT Hz
8	AC OUTPUT A	OUTPUT KVA
9	Grid LOAD kW	OUTPUT kW
10	DSP software version	ARM software version
11	Model and battery voltage level (48V)	Output power level (6.2kW)

12	Model and PV voltage level (500V)	Model and PV current level (40A)
13	RS485 address	Parallel operation connection status display
14	BMS Connection display	
15	Main Alarm Code	Sub Alarm code
16	Main Fault code	Sub Fault code

4.2 Parameter Settings

In the default interface, press and hold ENTER for more than two seconds to enter the Settings interface, and click ESC to exit to the real-time parameter display interface.

Settings	Parameter	Option	Description
【2】	Power supply priority (WFM)	SOL	It indicates the PV power priority mode.
		UTI (Default)	It indicates the grid priority mode. It switches to the battery inverter power supply only when there is no grid input.
		SBU	It indicates the inverter power priority mode. It switches to the grid power supply only when the battery voltage is lower than the value set in parameter [32]; it switches to battery discharging and inverter power supply only when the battery is fully charged or higher than the value set in parameter [33].
【3】	Charging priority (CHM)	CSO	PV priority charging: The grid will be applied to charge the battery only when the PV power is unavailable.
		SNU (Default)	
		OSO	PV charging only, without grid.
【4】	Startup Power of PV Priority Mode(PVS)	0(Default)	Grid charging will be activated when PV power is lower than the set value. The default value is 0, with a setting range of 0~6.2kW and a step of 0.1kW. This item is displayed only when parameter [03] = CSO

【7】	Off-grid output voltage (GOV)	230V (Default)	The default off-grid output voltage is 230V, with an optional setting of 200/208/220/230/240V.
【8】	Off-grid output frequency (OPF)	50Hz (Default)	Bypass adaptive function: when there is grid, it automatically adapts to the frequency of the first grid-on; When there is no grid, the output frequency can be set on the menu, and the default output of 230V AC inverter is 50 Hz.
		60Hz	
【9】	Input mode (GVR)	APL	A wide grid input voltage range for 230V device: 90~280VAC, applicable to household appliances. A narrow grid input voltage range for 230V device: 170~265VAC, applicable to computers, etc.
		UPS (Default)	
【10】	Anti reverse mains power setting(GPC)	40(Default)	Set the input power from the Grid under grid connected conditions, The larger the setting value, the better the anti reverse effect. Range 0-300w, step 5w.
【15】	Battery subtype (BTP)	USE(Default)	Lead-acid battery mode. Charge and discharge follow preset parameters; please set parameters matching actual lead-acid battery specifications.
		LIT	The setting enables the inverter to be compatible with non-communicating lithium batteries, as the inverter has lithium battery activation function. Under this mode, lithium battery charging and discharging are based on defined parameters. Users need to input charging and discharging parameters corresponding with battery information, otherwise the battery will be damaged.
		CAN	Lithium battery type. The inverter communicates with lithium batteries via CAN bus. Connect inverter BMS port to battery CAN port.
		485	Lithium battery type. In this mode, the inverter communicates with lithium batteries via RS485 communication. Connect the inverter BMS communication port to the battery RS485 port.
		SLD	Sealed lead-acid battery: with a constant-voltage charging voltage of 57.6V and a float charging voltage of 55.2V.
		FLD	Flooded lead-acid battery: with a constant-voltage charging voltage of 58.4V and a float charging voltage of 55.2V.
		GEL	Gel lead-acid battery: with a constant-voltage charging voltage of 56.8V, and a float charging voltage of 55.2V.
		L14/L15/L16	LiFePO4 batteries L16/L15/L14 correspond to series 16, 15 and 14 of LiFePO4 batteries. The default constant-voltage charging voltage of series 16, 15, and 14 is 56.8V, 53.2V, and 49.2V respectively, which can be adjusted.
		N13/N14	Adjustable ternary lithium batteries. The default constant-voltage charging voltage of series N13 is

			53.2V, and the default constant-voltage charging voltage of series N14 is 57.6V.
【16】	Battery communication protocol (BDS)	PYL(Default)	When setting [15] =CAN or 485, it is needed to select the corresponding lithium battery manufacturer/brand for communication. PYL=PYLONTECH GRW=GROWCOL VOT=VOLTRONIC
		GRW	
		VOT	
【17】	Maximum charging current of the battery (MCC)	60A (Default)	The default maximum charging current of the battery is 60A, with a setting range of 1~130A and a step of 5A
【18】	Limit current of AC charging (ACM)	60A (Default)	The default limited current is 60A for AC battery charging, with a setting range of 1~100A and a step of 5A.
【19】	Battery charging CV voltage (ICV)	56.8V (Default)	The default CV voltage is 56.8V, with a setting range of 48~59.2V and a step of 0.4V. It is valid when the battery type is customized battery and lithium battery.
【20】	Float charging voltage (FLV)	55.2V (Default)	The default float charging voltage is 55.2V, with a setting range of 48~58.4V and a step of 0.4V.
【21】	Charging cut-off SOC(CES)	100(Default)	The default cut-off SOC is 100, with a setting range of 10~100 and a step of 5. When the lithium battery reaches the set SOC value during charging, it stops charging and is only effective for BMS communication lithium battery.
【22】	Maximum boost charging duration (ICT)	180min (Default)	The default maximum boost charging duration is 180 min, with a setting range of 5~900 min, and a step of 5 min. It refers to the maximum charging duration when the voltage reaches the voltage set in parameter [20] during constant-voltage charging. USE:180min (Default) SLD/FLD/GEL/L14/L15/L16/N13/N14/LIT:120min (Default).
【23】	Battery under voltage alarm threshold (BUA)	44V (Default)	The default under voltage alarm threshold of the battery is 44V, with a setting range of 40~50V, and a step of 0.4V. When the load is less than 50% of the rated power, if the battery voltage falls below this threshold, an under-voltage alarm will be triggered. When the load exceeds 50% of the rated power, if the low-voltage alarm point is 2V lower than the set value, and the inverter output will not be shut down.
【24】	Battery recharging recovery threshold (BRC)	52V (Default)	The default battery recharging recovery threshold is 52V, with a setting range of 50~56V and a step of 0.5V. After the battery is fully charged, the inverter charging stops, and the battery charging can be recovered when the battery voltage is lower than

			this voltage value.
【27】	Battery low-voltage shutdown voltage (delayed shutdown) (BDL)	40V (Default)	The default battery low-voltage shutdown voltage is 40V, with a setting range of 40~48V and a step of 0.5V. When the battery voltage drops below this threshold, it will be forced to recharge the battery. It is valid when the battery type is customized batteries and lead-acid batteries.
【28】	LV Voltage (BLV)	42V (Default)	The default LV voltage is 42V, with a setting range of 40~52V and a step of 0.4V. When the load is less than 50% of the rated power, if the battery voltage falls below this threshold, the inverter output will shut down immediately. When the load is higher than the rated power, if the battery voltage is 1V lower than the set value, the inverter output will be shut down immediately. It is valid when the battery type is customized battery and lithium battery.
【29】	Low-voltage recovery threshold (LVR)	52V (Default)	The default recovery threshold for low-voltage disconnection battery voltage is 52V, with a setting range of 50~58V and a step of 0.5V. When the inverter output is disconnected due to the battery's low voltage, the battery inverter AC output can be recovered when the battery voltage is higher than this set value.
【30】	Off-grid discharge cutoff SOC (OSD)	20 (Default)	The default off-grid discharge cutoff SOC is 20, with a setting range of 5~90 and a step of 5. End-of-discharge SOC of lithium batteries under disconnected grid-tied relay and loaded battery. Only valid for BMS communication lithium batteries.
【31】	Off-grid end-of-discharge recovery SOC (ORD)	30 (Default)	The default off-grid end-of-discharge recovery SOC is 30, with a setting range of 10~100 and a step of 10. End-of-discharge SOC of lithium batteries under disconnected grid-tied relay and loaded battery. Only valid for BMS communication lithium batteries.
【32】	Battery-to-grid voltage (BTG)	46V (Default)	The default battery-to-grid supply voltage is 46V, with a setting range of 44V~52V and a step of 0.5V. When parameter [2] = SBU, the battery voltage is lower than the set value, and the output is switched from the inverter to the grid supply. This setting item is only applicable to lead-acid batteries. For BMS lithium battery settings, please refer to setting item [34].
【33】	Grid-to-battery voltage (GTB)	54V (Default)	The default grid-to-battery voltage is 54V, with a setting range of 48~58V and a step of 0.5V. When parameter [2] = SBU, the battery voltage is higher than the set value, and the output is switched

			from the grid to the inverter power supply. This setting item is only applicable to lead-acid batteries. For BMS lithium battery settings, please refer to setting item [35].
【34】	On-grid discharge cutoff SOC (GSD)	50 (Default)	The default On-grid discharge cutoff SOC is 50, with a setting range of 10~90 and a step of 10. Lithium batteries end discharge to recover SOC under loads of the grid and the battery. Only valid for BMS communication lithium batteries.
【35】	On-grid end-of-discharge recovery SOC (GRD)	90 (Default)	The default On-grid end-of-discharge recovery SOC is 90, with a setting range of 20~100 and a step of 10. Lithium batteries end discharge to recover SOC under loads of the grid and the battery. Only valid for BMS communication lithium batteries.
【36】	High-voltage disconnect threshold (HDV)	60V (Default)	The default battery input high-voltage disconnect threshold is 60V, with a setting range of 57~60.2V and a step of 0.1V. The inverter output will be shut down if the voltage is too high.
【37】	Li-ion Activation (Forced Wake-up) (LFW)	0 (Default)	After the lithium-ion battery enters the sleep state, the battery shall be activated and put into operation by the inverter once this parameter is set.
【46】	Device communication address (PDI)	0 (Default)	The parallel mode of the device shall be set with a range of 0~9.
【47】	Parallel mode (only available under the standby mode) (PMD)	SIG (Default)	Settings for the standalone use of the device.
		PAL	Settings for the single-phase parallel use of the device.
		3P1/3P2/3P3	Settings for the three-phase parallel use. All machine screens connected to P1 should be set to "3P1"; All machine screens connected to P2 should be set to "3P2"; All machine screens connected to P3 should be set to "3P3"; Suppose that when the output voltage in the setting [7] is 230V AC (the model supporting parallel connection): In this case, the voltage phases between (P1-P2, P1-P3, P2-P3) are different by 120 degrees, and the voltage between the live wire L1 of P1 phase and the live wire L2 of P2 phase is $230 \times 1.732 = 398\text{V}$ AC. Likewise, the wire voltage between L1-L3 and L2-L3 is 398V AC; The voltage between L1-N, L2-N and L3-N is 230V AC.

【48】	Type of parallel equipment(PDT)	MAS (Default)	Select the current device as the host. If the parallel mode setting is 3P2 or 3P3, This item cannot be set as the master unit, it is set as the slave unit by default.
		SAL	Select the current device as the slave
【51】	Generator automatic input enable(GAE)	DIS(Default)	This function is prohibited.
		ENA	After this function is enabled, when the grid fails and the battery voltage reaches the low-voltage disconnection threshold, the dry contact starts the generator to supply power to loads and charge batteries. When the grid recovers, the power supply will be switched from the generator to the grid.
【52】	Generator input rated power(GPI)	6.2(Default)	Set the maximum input power of the generator set. The default value is 6.2kW, and the range is 1 - 6.2kW with a step of 0.2kW.
【53】	Dual-load enabled (DLE)	DIS	This function is prohibited.
		ENA (Default)	AC Output1 connects to a critical load, and AC Output2 connects to a non-critical load (usually a high-power load). When the battery voltage is lower than the value set in [54], AC Output2 will be disconnected.
【54】	Non-critical load disconnection battery voltage (LDV)	46V (Default)	The default non-critical load disconnection battery voltage is 46V, with a setting range of 42~54V and a step of 0.5V.
【55】	Non-critical load disconnection regain battery voltage(LRV)	48V (Default)	The default non-critical load disconnection regain battery voltage is 48V, with a setting range of 42~54V and a step of 0.5V.
【56】	Non-critical load disconnection battery SOC(LDS)	50(Default)	The default non-critical load disconnection battery SOC is 50%, with a setting range of 10~100 and a step of 5.
【57】	Non-critical load disconnection regain battery SOC(LRS)	60(Default)	The default non-critical load disconnection regain battery SOC is 60%, with a setting range of 10~100 and a step of 5.
【58】	Non-critical load period settings (SLP)	DIS(Default)	Time period disable.
		ENA	When enabled, you will be redirected to the time setting page. The left side is the on time setting, and the right side is the off time setting.
【61】	Energy-saving mode enabled (ESM)	DIS (Default)	Energy-saving mode is prohibited
		ENA	After the mode is enabled, if the inverter output load is empty or less than 50W, turn off the output after the inverter output is delayed for a period. When the load is greater than 50W, the inverter starts automatically.

【62】	Overload Auto Restart (OLR)	DIS	When overload auto restart is prohibited, if overload occurs, turn off the output, and the device will never restart.
		ENA (Default)	When overload auto restart is enabled, if overload occurs, turn off the output, and the first restoration takes 30 seconds, the second restoration takes 30 seconds, and the third restoration takes 1 hour.
【63】	Over-temperature restart enabled (OTR) Cannot be set up(Default)	DIS	When over-temperature auto restart is prohibited, if over-temperature occurs, turn off the output machine and the inverter output will not restart.
		ENA (Default)	When over-temperature auto restart is enabled, if over-temperature occurs, turn off the output, and the AC inverter output will be restarted after the temperature drops.
【64】	Buzzer switch (BAL)	DIS	The buzzer alarm is prohibited with a muse mode.
		ENA(Default)	The buzzer alarm is enabled.
【65】	Bluetooth enabled (BTE)	DIS	This function is prohibited.
		ENA(Default)	Turn on Bluetooth.
【66】	Restore factory settings(FRS)	YES	After setting this option, you need to enter a password (618) for verification. Once verified, the system settings parameters will be restored to their factory default values. After the restoration is complete, the system will restart.
【67】	CT Enablement (CTM)	DIS(Default)	External CT is not enabled. The equipment operates according to the original three energy supply priority levels.
		ENA	External CT enabling, three power supply priorities are invalid. The power supply mode is as follows: without PV, the battery supplies power to the load; with PV, PV supplies power to the load first, and if PV is insufficient, the battery supplies power to the load; when PV is sufficient, PV supplies power to the load first, and the remaining energy is used to charge the battery. Power feed network is not allowed.

5. Other Functions

5.1 RS485 Communication Function

This port integrates RS485 and CAN:

- RS485 communicates with lithium battery BMS (customized);
- CAN communicates with lithium battery BMS (customized).

Network port pins are defined as follows:




1	485-B	5	CANL
2	485-A	6	NC
3	GND	7	NC
4	CANH	8	NC


5.2 USB Port Function

The USB port can connect to the USB disk to upgrade the firmware of the machine. The steps are as follows:

- Step 1: Make a burning USB drive
 1. Make sure the USB drive format is FAT32;

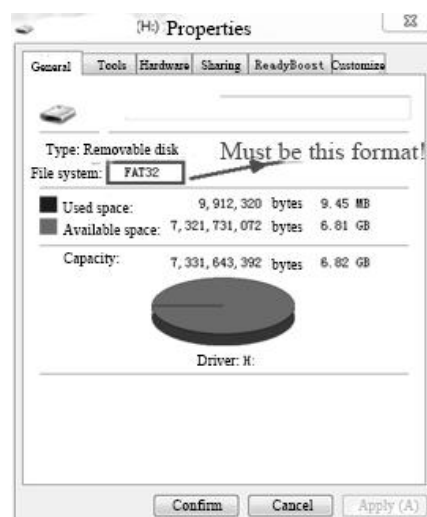

2. All files provided by our company are in the root directory of the USB drive.

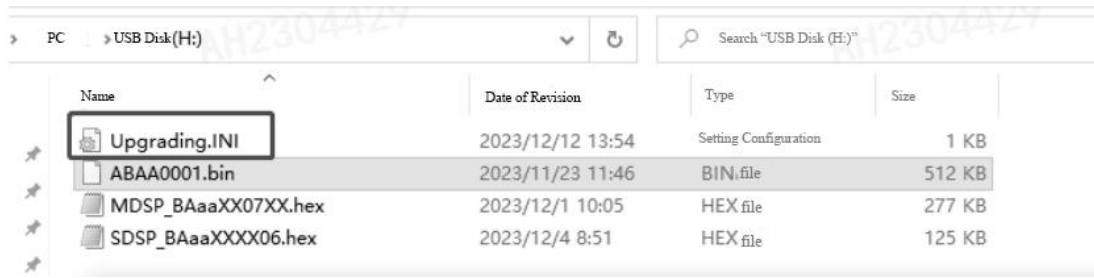

Name	Date of Revision	Type	Size
Upgrading.INI	2023/12/12 13:54	Setting Configuration	1 KB
ABAA0001.bin	2023/11/23 11:46	BIN file	512 KB
MDSP_BAaaXX07XX.hex	2023/12/1 10:05	HEX file	277 KB
SDSP_BAaaXXXX06.hex	2023/12/4 8:51	HEX file	125 KB

3. Check if the ini configuration file name is "Upgrading". If not, you need to update the file name to "Upgrading"




➤ Step 2: Burning

Insert the produced USB drive into the USB port for automatic burning. The red light flashes at an interval of 100ms to check whether burning is underway. HEX burning is about 1 min, and BIN file burning is about 15s. Burning multiple files has an interval of about 5s.

5.3 Dry Contact Function

This dry contact can control the ON/OFF of the diesel generator to charge the battery. ① Normally, the NC-N point is closed and the NO-N point is open; ② When the battery voltage reaches the low-voltage disconnection threshold, the relay coil is energized, and the NO-N point is closed while the NC-N point is open. At this point, the NO-N point can drive resistive loads: 125VAC/1A, 230VAC/1A, and 30VDC/1A. The dry contact interfaces are shown in the figure below.

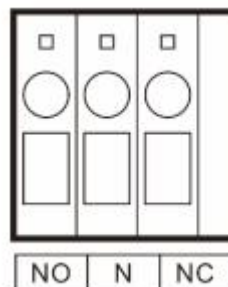

5.4 Wi-Fi Wireless Communication Function

The internal Wi-Fi of the energy storage inverter can be connected to the local router. After the data is uploaded to the server, the user can view the operating parameters and device status anytime and anywhere via the mobile APP while completing some general settings of the inverter with the APP.

6. APP Instructions

1. Please scan the QR code with your mobile phone to download the APP and obtain the instructions.



Android

IOS



HaiPower manual

User manual

7. Protection

7.1 Error Code

Buzzer working logic:

- Alarm: The alarm indicator flashes, and the buzzer beeps once every 1s and lasts for 30s before it stops.
- Fault: The fault indicator code is on, and the buzzer stops after a 10-second beep.

Error type	Error code	Error description
Fault	103	Inverter DC offset is too high
	105	Bypass AC output is overloaded
	200	Off-grid output voltage is too low 0:Off-grid first-stage low voltage 1:Off-grid second-stage low voltage
	201	Off-grid output voltage is too high
	202	Off-grid output has a short circuit
	203	Off-grid output is overloaded 1:First-stage Overpower 2:Second-stage Overpower 3:Third-stage Overpower 4:Fourth-stage Overpower 5:First-stage Overcurrent 6:Second-stage Overcurrent 7:Third-stage Overcurrent 8:Fourth-stage Overcurrent
	204	Abnormal off-grid output DC component offset
	301	Battery open circuit
	305	Battery overvoltage
	306	Battery overcurrent
	307	Battery communication fault
	308	BMS fault
	400	PV overvoltage
	403	PV short circuit
	404	PV reverse connection
	500	Abnormal BUS voltage 0: Bus Over Voltage 1: Bus Under Voltage 2: Off-grid First-stage Bus Under Voltage 3: Off-grid Second-stage Bus Under Voltage
	501	Abnormal BUS voltage sampling 1: Bus Voltage Too Low 2: Bus Voltage Too High
	502	Abnormal communication in the device
	505	Abnormal connection of the temperature sensor
	506	Device over-temperature 0: LLC Over Temperature

		1: Boost Over Temperature 2: Inverter Over Temperature
	507	Abnormal relay 0: Relay Open Circuit 1: Relay Short Circuit
	508	Overcurrent Protection 0: Inverter Software Overcurrent 1: PV Software Overcurrent 3: Inverter Tz Overcurrent 4: PV Tz Overcurrent
	509	Anti-counter-current output timeout
	510	Mismatched software version
	511	Fan fault
Alarm	102	CT Connection Abnormal 0: CT Reverse Connection 1: CT CT Disconnected
	103	Grid unavailable
	104	Overrange voltage of grid 0: First-stage Overvoltage 1: Second-stage Overvoltage 2: Third-stage Overvoltage 3: First-stage Undervoltage 4: Second-stage Undervoltage 5: Third-stage Undervoltage
	105	Overrange frequency of grid 0: First-stage Overfrequency 1: Second-stage Overfrequency 3: First-stage Underfrequency 4: Second-stage Underfrequency
	106	No output voltage from the generator
	107	Overrange output voltage of the generator
	108	Overrange output frequency of the generator
	302	Low battery
	304	Abnormal BMS information
	305	Low battery voltage alarm
	502	Abnormal memory reading and writing

7.2 Troubleshooting (partial)

Fault Code	Fault Description	Troubleshooting
202	Off-grid output short circuit	Check whether the load end wiring is short-circuited. Restart the inverter after clearing the short circuit.
203	Off-grid output overload	Restart the inverter after reducing the electric equipment.

301	Battery open circuit	Check whether the battery circuit breaker is switched on and battery cables are connected.
305	Battery overvoltage	Check whether the battery voltage exceeds the protection value and discharge the battery until it is lower the overvoltage recovery value.
306	Battery overcurrent	Restart the inverter after reducing the electric equipment.
308	BMS fault	Check BMS fault information.
400	PV overvoltage	Use a multimeter to check whether the solar energy input voltage exceeds the maximum PV input voltage of the device.
404	PV reverse connection	Check whether the solar energy input wiring is reversed.
506	Device over-temperature	Check whether the heat dissipation hole of the device is blocked by foreign bodies. The device will return to normal operation after cooling down.
511	Fan fault	Check whether the fan is blocked by foreign bodies.
	No display on the screen	Check whether the device switch is ON and whether the battery and PV circuit breaker are switched on; Press any key on the screen to wake up the screen.

8. System Maintenance

➤ In order to maintain the best performance of the inverter, it is recommended to check the following items three times a year:

① Make sure that the airflow around the inverter is not blocked and remove any dirt or debris from the air intake to ensure the intake air volume.

② Check the wires for electrical leakage caused by poor insulation due to weathering or damage by other objects.

9. Technical Parameters

Technical Data	5kW	6.2kW
Solar Input Data		
Max. PV Input Power	10000W	12000W
Max. Input Voltage	500V	
Start-up Voltage	120V	
MPPT Voltage Range	90V~450V	
Max. Input Current per MPPT	40A	
Max. Short Circuit Current per MPPT	50A	
Number of MPPT	1	
AC Input Data(Grid&Generator)		
Nominal Input Voltage	230Vac, L/N/PE	
Input Voltage Range	90~280Vac	
Max. Input Current	Grid 40A/Generator 40A	
Nominal Input Power	5000W	6200W
AC Frequency Range	50/60Hz(Auto sensing)	
Battery Data		
Battery Type	Li-Ion/Lead-acid	
Nominal Battery Voltage	48V	
Battery Voltage Range	42~60V	
Max. Charge/Discharge Current	110A/120A	130A/140A
Max. Charge Power	5000W	6200W
Li-Ion Battery Activation	Yes	
Li-Ion Battery Communication	CAN/RS485	
Max. Solar Charge Current	110A	130A
Max. AC Charge Current	100A	100A
Max. Charge Current (PV+AC)	110A	130A
Inverter Output Data		

Nominal Output Power	5000W	6200W
Peak Apparent AC Power	10000VA	12000VA
Nominal AC Voltage	230V	
Nominal Grid Frequency	50/60Hz	
Voltage Waveform	Pure Sine wave	
Transfer Time	4ms	
Max. Output Current	21.7A	27A
Overload Protection	60s@102%-110% load; 30s@110%-130% load; 5s@130%-200% load	
THDv (@linear load)	<3%	
Efficiency		
Peak Efficiency	94%	
MPPT Efficiency	≥99.9%	
Protection		
DC Surge Protection	Yes	
AC Surge Protection	Yes	
AC Short circuit Protection	Yes	
System Parameters		
Dimension (W*H*D)	510*360*126mm	
Weight	12.3kg	
Relative Humidity	5%~95% (Non-condensing)	
Operating Temperature Range	-10℃~60℃	
Noise Emission	≤50dB	
Altitude	2000m	
Cooling Method	Fan Cooling	
Ingress Protection	IP54	
Characteristic		
Number of AC Output	2	
Display	LCD&APP	
Communication Interface	RS485/ USB /CAN/ Wi-Fi	
Parallel Capability	9	

Product Qualification Certificate

The manufacture, assembly and performance of the PV inverter all fit company's quality standard. Delivery granted.